

Refer to the [Parts Breakdown Book](#) for replacement part numbers or [contact customer support](#) for help in finding a part

## You may need several of these tools:

- Allen wrench (5/16 or 7/32)
- Channel locks
- » Crescent wrench
- » Flathead screwdriver
- » Phillips head screwdriver
- Pipe joint compound
- Soft cloth
- Teflon tape
- No tools necessary

## Part key:

No.	Description
1	Index button
2	Handle screw
3	Handle
4	Bonnet retaining ring
5	Bonnet lock (not on all models)
6	Stem and bonnet assembly
7	Seat washer
8	Washer screw

1. Always turn off water supply. Turn hot and cold water full on to relieve line pressure.
2. Using a flathead screwdriver or knife, lift off index button, remove handle screw using a phillips head screwdriver, remove handle.
3. With the flathead screwdriver, pry up the bonnet lock if present.
4. Unscrew stem and bonnet assembly with 8" or 10" crescent wrench. **IF YOU ARE REPAIRING A CONCEALED WALL MOUNTED FAUCET DO NOT REMOVE THE FLANGES BECAUSE THEY HOLD THE FAUCET IN PLACE** (not shown).
5. Remove washer screw using a phillips head screwdriver.
6. Install new seat washer and replace screw.
7. Install stem and bonnet making sure to align bonnet for proper bonnet lock fit.

**TIP: Open the cartridge slightly to make installation easier.**

8. Replace handle.
9. Turn on water, check for leaks.

